

# MedZense DMS Medical 2D DataMatrix Scanner

## Quick Start




NLS-NVF260


V1.0 - PN: 10600900360

### Communicate with the Host via USB

1. Plug the USB Type-C connector into data port on the scanner.

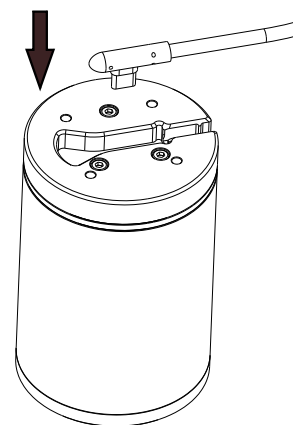

2. Plug the USB connector into the USB port on the host.

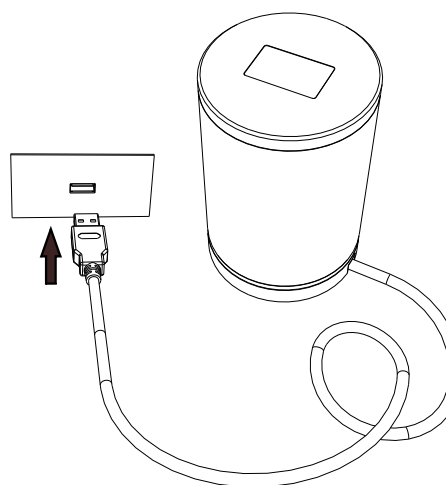

## MedZense DMS Barcode Programming

  
NLS-NVF260  
V1.0 - PN: 10600900360

### 1 Default Settings



@FACDEF

Restore All Factory Defaults

### 2 Interface Settings



@INTERF3

USB HID Keyboard



@INTERF8

USB CDC COM Port

### 3 Terminating Character Suffix



@TSUSET0D

Set to CR(0X0D)



@TSUSET0D0A

Set to CRLF(0X0D,0X0A)